


## Semi Recessed Tops

Grinding on the underside of our semi-recessed tops is essential to smooth off any roughness after demoulding.

- Refer diagrams 1 & 2.

This is standard on the underside of all our cast tops and is not seen when the top is placed on it's cabinet.

- Refer diagram 3.

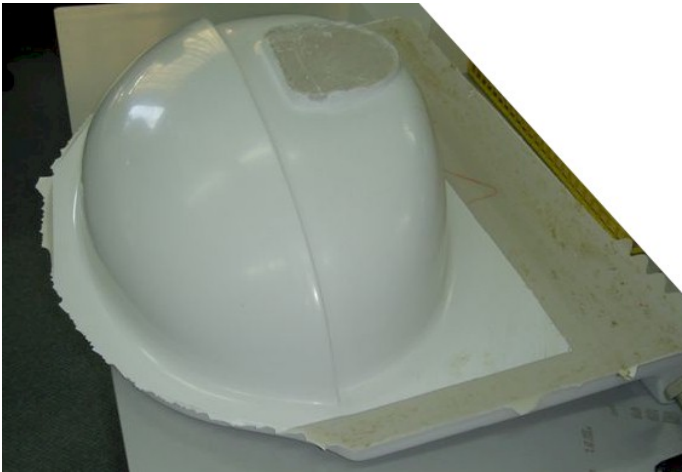

**Diagram 1 (before)**



**Diagram 2 (after)**



**Diagram 3**